
# 12.Rear Washer

#### A: REMOVAL

- 1) Remove the rear gate upper trim. <Ref. to EI-53, REMOVAL, Rear Gate Trim.>
- 2) Remove the washer hose from washer nozzle.
- 3) Push the claw of the nozzle from the backside of rear gate panel with a flat tip screwdriver or equivalent, and remove the washer nozzle.

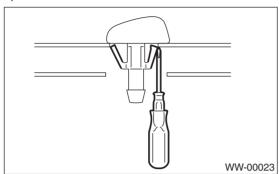

## **B: INSTALLATION**


Install in the reverse order of removal.

### C: INSPECTION

- · Make sure the nozzle and hose are not clogged.
- · Make sure the hose is not bent.
- While the vehicle is at a standstill, make sure that the washer injection position is as shown in the figure.

#### NOTE:

Washer injection position can not be adjusted.

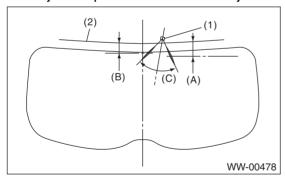

- (1) Nozzle
- (2) Upper edge of the rear gate glass
- (A) From rear gate glass upper end to center of washer fluid spraying: 71 mm (2.8 in)
- (B) From rear gate glass upper end to center of washer fluid spraying: 56 mm (2.2 in)
- (C) 72°

# **Rear Washer**

# **ENTERTAINMENT**



		Page
1.	General Description	
2.	Audio System	
3.	Navigation System	
4.	Rearview Camera System	
5.	Multi-function Display (MFD) System	
6.	Rear Entertainment System	
7.	Control Panel	9
8.	Audio	13
9.	Front Speaker	14
10.	Tweeter	15
11.	Rear Speaker	16
12.	Woofer	17
13.	Antenna	18
14.	Antenna Amplifier	20
15.	Noise Suppressor	21
16.	Navigation Display	22
17.	Navigation Body	23
18.	Navigation Switch	24
19.	GPS Antenna	25
20.	Rearview Camera	26
21.	Rearview Camera Control Unit	27
22.	Multi-function Display (MFD)	28
23.	Multi-function Switch	29
24.	Rear Entertainment	30
25.	AUX Input Terminal	31
26.	Front Accessory Power Supply Socket	
27.	Rear Accessory Power Supply Socket	
28.	Steering Satellite Switch	